

speedtouch™


SpeedTouch™510v4

Residential ADSL Gateway



User's Guide

Release R4.3.1

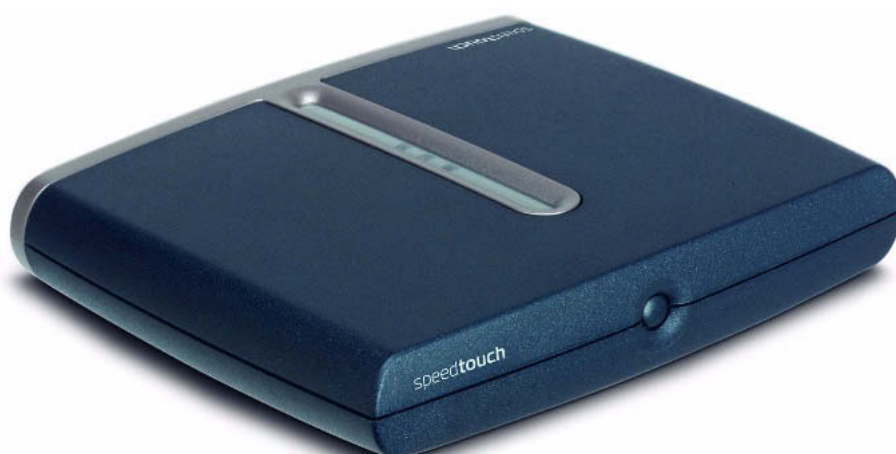

UPnP™

A THOMSON BRAND

SpeedTouch™

510_{v4}

User's Guide

R4.3.1

Copyright

Copyright ©1999-2005 THOMSON. All rights reserved.

Passing on, and copying of this document, use and communication of its contents is not permitted without written authorization from THOMSON. The content of this document is furnished for informational use only, may be subject to change without notice, and should not be construed as a commitment by THOMSON. THOMSON assumes no responsibility or liability for any errors or inaccuracies that may appear in this document.

Thomson Telecom Belgium
Prins Boudewijnlaan, 47
B-2650 Edegem
Belgium

www.speedtouch.com

Trademarks

The following trademarks are used in this document:

- ▶ SpeedTouch™ is a trademark of THOMSON.
- ▶ Microsoft®, MS-DOS®, Windows® and Windows NT® are either registered trademarks or trademarks of Microsoft Corporation in the United States and/or other countries.
- ▶ UNIX® is a registered trademark of UNIX System Laboratories, Incorporated.
- ▶ Apple® and Mac OS® are registered trademarks of Apple Computer, Incorporated, registered in the United States and other countries.
- ▶ Adobe, the Adobe logo, Acrobat and Acrobat Reader are trademarks or registered trademarks of Adobe Systems, Incorporated, registered in the United States and/or other countries.
- ▶ Netscape® and Netscape Navigator® are registered trademarks of Netscape Communications Corporation.
- ▶ Ethernet™ is a trademark of Xerox Corporation.
- ▶ UPnP™ is a certification mark of the UPnP™ Implementers Corporation.
- ▶ Wi-Fi® and the Wi-Fi logo are registered trademarks of the Wi-Fi Alliance. "Wi-Fi CERTIFIED", "Wi-Fi ZONE", "Wi-Fi Alliance", their respective logos and "Wi-Fi Protected Access" are trademarks of the Wi-Fi Alliance.

Other products may be trademarks or registered trademarks of their respective manufacturers.

Document Information

Status: v1.0 (May 2005)

Reference: E-DOC-CTC-20050429-0095

Short Title: User's Guide ST510_{v4} R4.3.1

Contents

About this User's Guide	1
<hr/>	
1 Your SpeedTouch™	3
1.1 SpeedTouch™ Features	4
1.1.1 Hardware Specifications	5
1.1.2 Software Features	6
1.2 SpeedTouch™ LED Behaviour	8
1.3 How to Access your SpeedTouch™	10
1.3.1 Access via the Web Interface.....	11
1.3.2 Access via CLI	12
1.3.3 Access via FTP	14
1.3.4 Remote Assistance	17
<hr/>	
2 Local Network Setup	19
<hr/>	
3 Internet Connectivity Dial-In Clients	21
3.1 SpeedTouch™ Web Pages	23
3.2 IGD Control Agent	25
3.3 MS Windows XP BroadBand Connection	27
3.4 Mac OS X PPPoE Dial-in Client	31
<hr/>	
4 SpeedTouch™ Web Interface	33

4.1	Navigation	34
4.1.1	Menu	35
4.1.2	Language Bar	36
4.1.3	Navigation Bar	37
4.1.4	Notification Area	38
4.1.5	Tasks	39
4.2	Home	40
4.3	SpeedTouch	41
4.3.1	Information	42
4.3.2	SpeedTouch™ Easy Setup	43
4.3.3	Restart	44
4.3.4	Configuration	45
4.3.5	Backup & Restore	46
4.3.6	Reset to Factory Defaults	47
4.3.7	Event Logs	48
4.3.8	Update	49
4.4	Broadband Connection	50
4.4.1	Connectivity Check	51
4.4.2	DSL Connection	52
4.4.3	Internet Services	53
4.4.4	Internet Service Settings	54
4.5	Toolbox	55
4.5.1	Remote Assistance	56
4.5.2	Game & Application Sharing	57
4.5.3	Defined Games & Applications	58
4.5.4	Game or Application Definition	59
4.5.5	New Game or Application	60
4.5.6	Firewall	61
4.5.7	Dynamic DNS	62
4.5.8	User Management	63
4.5.9	Edit User	64
4.5.10	Change Default User	65
4.5.11	Add User	66

4.6	Home Network	67
4.6.1	Devices	68
4.6.2	Device Settings	69
4.6.3	Assign Public IP	70
4.6.4	Interfaces	71
4.6.5	Interface Settings	72
4.6.6	DHCP Pool.....	73
<hr/>		
5	Software Upgrade.....	75
5.1	Upgrade Wizard on Setup CD.....	76
<hr/>		
6	Troubleshooting.....	79
6.1	General SpeedTouch™ Troubleshooting	80
6.1.1	Ethernet Troubleshooting.....	81
6.1.2	Upgrade Troubleshooting.....	82
6.2	UPnP™ on Windows XP Systems.....	83
6.3	Reset to Factory Defaults	85

About this User's Guide

Used Symbols



A **note** provides additional information about a topic.



A **tip** provides an alternative method or shortcut to perform an action.



A **caution** warns you about potential problems or specific precautions that need to be taken.

Terminology

Generally, the SpeedTouch™510v4(i) will be referred to as SpeedTouch™ in this User's Guide.

Typographical Conventions

In interactive input and output, typed input is displayed **in a bold font** and commands are displayed **like this**.

Comments are added *in italics*.

Example:

```
=>language list
CODE LANGUAGE VERSION FILENAME
en* english 4.2.0.1 <system>    Only one language is available
```

Documentation and software updates

THOMSON continuously develops new solutions, but is also committed to improve its existing products.

For more information on THOMSON's latest technological innovations, documents and software releases, visit us at:

www.speedtouch.com

1 Your SpeedTouch™

Introduction	With the SpeedTouch™510v4(i) Residential ADSL Gateway you can surf the Internet at high speed.
Installation	For more information on how to set up your SpeedTouch™, installation and wiring and how to do a first Internet connection setup, refer to the provided Installation and Setup Guide.
Contents	This User's Guide will assist you in configuring your SpeedTouch™.
Safety instructions	Before connecting the SpeedTouch™, please read the SpeedTouch™ Quick Installation Guide and the Safety Instructions and Regularity Notices.

1.1 SpeedTouch™ Features

- Introduction Your SpeedTouch™ offers you a wide range of outstanding features.
In this section you will find a comprehensive overview of the:
- ▶ [Hardware Specifications](#)
 - ▶ [Software Features](#)

1.1.1 Hardware Specifications

Gateway	<hr/> Integrated multi-mode ADSL modem, supporting: <ul style="list-style-type: none"> ▶ ADSL over POTS for a SpeedTouch™ ADSL/POTS variant) ▶ ADSL over ISDN for a SpeedTouch™ ADSL/ISDN variant) <hr/>
Physical interfaces	<hr/> <ul style="list-style-type: none"> ▶ WAN: One RJ-11 port for ADSL/POTS or ADSL/ISDN connection ▶ LAN: Depending on the variant you purchased, your SpeedTouch™ is equipped with: <ul style="list-style-type: none"> ▶ A single RJ-45 port for Ethernet connection (10/100Base-T) ▶ A four RJ-45 port 10/100Base-T Ethernet switch ▶ Power inlet <hr/>
LEDs	<hr/> LED indicators for all interfaces <hr/>
Power requirement	<hr/> Power supply: Depending on the variant you purchased 9V DC or 15V AC, 1000mA <hr/>

1.1.2 Software Features

ADSL compliance	<ul style="list-style-type: none">▶ If POTS in overlay: G. handshake, Full Rate ADSL, G.dmt, G.lite (splitterless ADSL)▶ If ISDN in overlay: G.handshake, G.dmt
ATM features	<ul style="list-style-type: none">▶ Up to 16 simultaneous PVCs, allowing multiple simultaneous destinations▶ ATM QoS per PVC: CBR, VBR-rt, VBR-nrt, UBR▶ RFC 1483 / 2684 multiprotocol encapsulation over AAL5 / ATM: both LLC / SNAP and VC-based multiplexing supported
Bridging features	<ul style="list-style-type: none">▶ Multiport self-learning transparent bridge per IEEE 802.1D for LAN interconnect▶ Remote bridge ports are isolated from each other▶ Pre-defined bridge filters to WAN (no filter, no CPE-to-WAN broadcast, PPPoE only) and to LAN (no filter, multicast filter)
Routing features	<ul style="list-style-type: none">▶ Multi-port (up to 16 PVCs) router▶ Static routing, automatic routes (PPP, LAN)▶ IP address multi-homing
Services	<ul style="list-style-type: none">▶ UPnP with NAT traversal capability:<ul style="list-style-type: none">▶ enables game technologies (Xbox live, Direct X, and many others)▶ enables conferencing functions of Microsoft Messenger▶ Transparent bridging (IEEE802.1D)▶ PPPoE routing/bridging with integrated PPP Relay▶ PPPoA routing, PPPoA-to-PPTP relaying▶ IP routing with static routing, packet classified routing and residential RIP▶ Hyper-NAT with virtual server mapping (for instance for Web, FTP, Mail servers) and ALGs (such as NetMeeting, MSN Messenger, VPN passthrough, and others)▶ Quality of Service:<ul style="list-style-type: none">▶ IP QoS▶ Integrated Dynamic DNS client
Security	<ul style="list-style-type: none">▶ PAP (RFC1334), CHAP (RFC1994) for PPP session▶ Integrated Stateful Inspection Firewall▶ Multi-level SpeedTouch™ access policies, Digest Authentication
Configuration	<ul style="list-style-type: none">▶ Home Install Wizard, Easy Setup wizard▶ Intuitive web-based GUI (HTTP/HTTPS)▶ Advanced configuration via telnet - Command Line Interface (CLI)▶ Remote management access control

Management




- ▶ Multi-level user protection, Event logging
- ▶ DHCP server, client and relay, DHCP-to-PPP spoofing
- ▶ DNS server, client and relay
- ▶ Time synchronization:
 - ▶ SNTPv1, SNTPv2, SNTPv3 and SNTPv4
- ▶ System logging
- ▶ SNMPv1 agent with MIB-II
- ▶ Firmware upgradeable via upgrade wizard on Setup CD

1.2 SpeedTouch™ LED Behaviour

Front panel LEDs

The SpeedTouch™ is equipped with a number of LEDs on its top panel, indicating the state of the device during normal operation.

Following table shows the meaning of the different LEDs:

Indicator				Description
Logo	Name	Colour	State	
	Power/ System	Off		Power off
		Green	On	Power on, normal operation
	DSL/ WAN	Off		No DSL line
		Amber	Flashing	DSL line synchronisation pending
			On	DSL line synchronised
		Green/ Amber	Toggling	DSL line synchronised and end-to-end connection pending
	LAN	Off		No Ethernet link
		Green	On	Ethernet link


Alert condition LED

In addition to normal operation behaviour, the Power/System LED may also indicate following startup or error conditions:

Indicator			Description
Name	Colour	Status	
Power/ System	Off		Power off
	Amber	Flashing	Power on, BOOTP status
		On	Power on, POST (*) pending
	Red	On	Power on, POST (*) failed
	Green	Flashing	Power on, Back-to-Defaults status

(*) Power On Self Test (POST)

Ethernet LEDs A LED may be provided per Ethernet port to indicate link integrity (or activity). Depending on the SpeedTouch™ product you are using, a second LED (A) may be provided to indicate the 10/100Base-T selection:

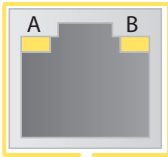

Indicator			Description
Name		LED Status	
A (Optional)	Integrity (Activity)	Off	No connection on this port
		On	Ethernet link up
		Flashing	Data is flowing from/to this port
B	10/100Base-T	Off	10Base-T Ethernet connection
		On	100Base-T Ethernet connection

1.3 How to Access your SpeedTouch™

Access methods

Your SpeedTouch™ is accessible in one of following ways:

Access Method	Can be used to:
Web	Configure your SpeedTouch™ via HTTP or HTTPS. For more information, see “1.3.1 Access via the Web Interface” on page 11.
Command Line Interface (CLI)	Fine tune your SpeedTouch™ configuration. For more information, see “1.3.2 Access via CLI” on page 12.
File Transfer Protocol (FTP)	Backup and restore data on your SpeedTouch™. For more information, see “1.3.3 Access via FTP” on page 14.
Remote Assistance	Allow a remote user to help you configuring your SpeedTouch™. For more information, see “1.3.4 Remote Assistance” on page 17.

1.3.1 Access via the Web Interface


Procedure To access the SpeedTouch™ via the web interface:

- 1** Open a web browser.
- 2** In the address bar type your SpeedTouch™'s IP address or DNS host name, by default that is 'http://speedtouch.lan' or '192.168.1.254'.



You can access the pages via the http protocol. For remote assistance the secure version, https, in combination with certificates is used; provide your ISP with the https link, user name and password before he can log on to the pages. For more information, see "1.3.4 Remote Assistance" on page 17.

- 3** As a result the SpeedTouch™ Home page appears, from where you can navigate to all the configurable aspects of the SpeedTouch™.

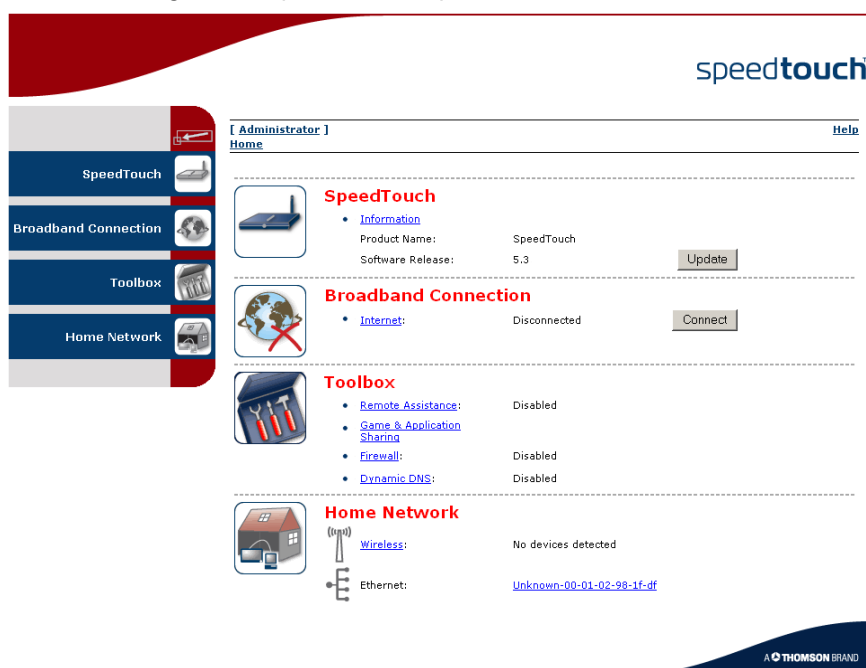

For more information on the web pages, see "4 SpeedTouch™ Web Interface" on page 33.

1.3.2 Access via CLI

Command Line Interface (CLI)

You can access the Command Line Interface (CLI) via:

- ▶ A Telnet session

This requires that TCP/IP connectivity exists between the host from which the Telnet session is opened and the SpeedTouch™. Your SpeedTouch™ and the connected PC must have an IP address in the same subnet.

- ▶ Quote site commands (over FTP)

For more information, see “[Quote site command](#)” on page 16.

For information on CLI commands, see the SpeedTouch™ CLI Reference Guide.

Proceed as follows:

- 

In Windows XP for instance:

- 



4 As soon as you've opened a session to the CLI, the SpeedTouch™ banner is displayed, followed by the CLI prompt, as shown in the example below:

[illegible]

1.3.3 Access via FTP

File Transfer Protocol (FTP)

You can access the file system of the SpeedTouch™ via the File Transfer Protocol (FTP), in order to:

- ▶ Restore or backup configuration files, templates or language packs.
- ▶ Upgrade your configuration or firmware.

File system

The SpeedTouch™ file system is stored on nonvolatile memory, and contains the SpeedTouch™ software, service template files and (optionally) default setting files.

FTP session

To open an FTP session:

- 1 Open a **Command Prompt** window.



In Windows XP for instance:

- 1 On the Windows task bar, click **Start**.
- 2 Select **(All) Programs > Accessories > Command Prompt**.

- 2 At the prompt, type **ftp** followed by the IP address of your SpeedTouch™ (default is 192.168.1.254).

- 3 Enter your SpeedTouch™ security user name and password.



The default user is 'Administrator' and the default password is blank.

- 4 The example below shows an FTP session to the SpeedTouch™ file system:

```
C:\WINDOWS\system32\cmd.exe - ftp 192.168.1.254
Microsoft Windows XP [Version 5.1.2600]
(C) Copyright 1985-2001 Microsoft Corp.

C:\Documents and Settings\nielsenv>ftp 192.168.1.254
Connected to 192.168.1.254.
220 Inactivity timer = 120 seconds. Use 'site idle <secs>' to change.
User (192.168.1.254:(none)): Administrator
331 SpeedTouch (00-0E-50-5A-D9-A0) Password required.
Password:
230 OK
ftp>
```

File system structure

The structure of the file system is very simple: It consists of a single root directory called **root** and a subdirectory called **dl**.

- ▶ The **root** directory contains:
 - ▶ all the necessary files for the SpeedTouch™ to boot correctly
 - ▶ the **dl** directory
- ▶ The **dl** (download) directory contains the software image.



If you made changes to the SpeedTouch™ configuration and saved them, a user.ini configuration settings file is created in the **dl** subdirectory.

File system access rights

On the different directories you have following privileges:

Directory	Access rights
root	NO read/write
dl	read/write

Common FTP commands

Depending on the access rights you have on a directory, you can use one of following commands:

Command...	You can use to...
cd	access another directory than the one currently open. Example: ftp> cd dl.
dir	list the directory files. Example: ftp> dir.
bin	set the transfer mode to 'binary'.
hash	turn on the hashing option.
put	upload files. Example: ftp> put C:/MyBackupFiles/user.ini. A configuration file must be uploaded to the dl directory.
get	download files. Example: ftp> get user.ini. Downloading the configuration file must be done from the dl directory.
delete	delete files.
bye	quit FTP.

FTP file transfer

To allow correct file transfers, set the transfer mode to “binary”: At the ftp prompt, type **bin** and press Enter.



Turn on the hashing option to see the progression of the file transfer: At the ftp prompt type **hash** and press Enter.

Example:

```
/home/doejohn{1}$ftp 192.168.1.254
Connected to 192.168.1.254
220 Inactivity timer = 120 seconds. Use 'site idle <secs>' to change.
Name (192.168.1.254:doejohn):
331 SpeedTouch™ (00-90-D0-01-02-03) User 'doejohn' OK. Password required.
Password : #####
330 OK
ftp>
ftp>bin
200 TYPE is now 8-bit binary
ftp>
ftp>hash
200Hash mark printing on (8192 bytes/hash mark).
ftp>cd dl
250 Changed to /dl
ftp>put C:\user.ini
200 Connected to 192.168.1.10 port 1271
150 Opening data connection for user.ini

226 File written successfully
ftp: 256 bytes sent in 0,000Seconds 256000,000Kbytes/sec.
ftp>
```

Quote site command

All the CLI commands can be executed from within an FTP session. Only complete CLI commands (in other words, the complete command syntax with all the parameters already specified) can be executed.

Example: To execute the CLI command **:software cleanup**: At the FTP prompt type ‘quote site software cleanup’ and press Enter.

```
ftp> quote site software cleanup
200-
200 CLI command "software cleanup" executed
ftp>
```

For more information on CLI commands, see the CLI Reference Guide.

1.3.4 Remote Assistance

Remote access

You can make your SpeedTouch accessible from the Internet with regard to remote support. This way, you can allow your helpdesk to access your SpeedTouch™ remotely.

Enabling remote access

To enable remote assistance:

- 1** Go to the SpeedTouch™ pages, as described in “1.3.1 Access via the Web Interface” on page 11.
- 2** In the menu select **Toolbox > Remote Assistance**.
- 3** Click **Enable Remote Assistance**.
- 4** Provide the following parameters to your helpdesk:
 - ▶ URL (the HTTPS link)
 - ▶ User name
 - ▶ Password
- 5** Your ISP is now able to access your SpeedTouch™ via the secure HTTPS link in combination with the provided certificate (a secure authentication mechanism).



For security reasons, after 20 minutes of inactivity, or on reboot, Remote Assistance will be automatically disabled.

Disabling remote access

To disable remote assistance:

- 1** Go to the SpeedTouch™ pages, as described in “1.3.1 Access via the Web Interface” on page 11.
- 2** In the menu select **Toolbox > Remote Assistance**.
- 3** Click **Disable Remote Assistance**.

2 Local Network Setup

Local network	<p>For Ethernet connectivity you will need at least:</p> <ul style="list-style-type: none"> ▶ A computer that already has an Ethernet Network Interface Card (NIC) installed ▶ If required, a hub or switch and the necessary connection cables
Ethernet cables	<p>In the SpeedTouch™ package, a full-wired straight-through RJ-45/RJ-45 Ethernet cable, hereafter referred to as a LAN cable, is included.</p> <p>As all SpeedTouch™ variants feature 10/100Base-T auto-sensing MDI/MDI-X Ethernet ports, you can use any type of full wired LAN cable to connect your equipment.</p>
Standard wiring procedure	<p>Use the LAN cable provided to wire your computer's Ethernet port to (one of) the SpeedTouch™'s Ethernet port(s).</p> <p>In case of a single Ethernet port SpeedTouch™, you will need an external hub or switch to connect multiple computers.</p> <p>In case of a SpeedTouch™ switch, you can create a local Ethernet network of up to four devices, without needing extra networking devices.</p>
Ethernet link check	<p>The SpeedTouch™ LED indicator(s) allow(s) you to check your Ethernet.</p> <p>See “ Ethernet LEDs ” on page 9 for more information.</p>

Device settings

Once you've connected a device, you are able to personalise its settings:

- 1 Go to the SpeedTouch™ web pages.
- 2 In the menu select **Home Network > Devices**.
- 3 Click the name of your device, or if the device's settings haven't been personalised yet, click the MAC address of the device.
- 4 On the top right, click **Configure**.
- 5 Now you can change the device's name, lock its IP address and assign applications and services to the device.



PC1

• Information

New Name:
Status: Active
Type:
Connected To: ethif1 (Ethernet)

• Addressing

Physical Address: 00:01:02:98:1f:df
IP Address Assignment: DHCP
IP Address: 192.168.1.64
Always use the same address: ☐
DHCP Lease Time: 1 day, 0:00:00

• Connection Sharing


Game or Service

FTP Server	Unassign
HTTP Server (World Wide Web)	Unassign
<input type="text" value="Age of Empires"/>	<input type="button" value="Add"/>

3 Internet Connectivity Dial-In Clients

Introduction For setting up initial Internet connectivity, using the Home Install Wizard on the Setup CD or the embedded Easy Setup, refer to the provided Installation and Setup Guide.

Access methods Depending on the configuration of the SpeedTouch™ you may have:

- ▶ **Direct access:**
As soon as the initial configuration has been done, immediate and uninterrupted WAN access is provided.
 In case of direct access, the remote organisation might ask for a user name and password on an Internet welcome page.
- ▶ **Dial-in access:**
Access must be explicitly established, that is by “dialling” into a Broadband Remote Access Server (BRAS).
Depending on the SpeedTouch™ configuration, dial-in access is provided via the SpeedTouch™’s Routed PPPoA or Routed PPPoE packet services with embedded PPP client.

Connection protocols The applied connection protocol model depends on the service profile you selected to configure the SpeedTouch™ and should correspond with the Service Provider’s requirements. If your ISP provides PPPoE for instance, you should configure PPPoE. More information on connection protocols can be found in the Internet Connection Configuration Guide.

Dial-in clients There are different ways of dialling in, depending on the operating system on your PC and your preferences.

Dial-in method:	can be used on following operating system:	For more information, see:
Embedded PPP dial-in client:		
Dial-in client on embedded pages	MS Windows, Mac, unix, other	“3.1 SpeedTouch™ Web Pages”
MS Windows XP IGD Control Agent for UPnP	MS Windows XP	“3.2 IGD Control Agent” on page 25
Host PPP dial-in client for a SpeedTouch™ configured in pure bridging mode:		
MS Windows XP Broadband connection	MS Windows XP	“3.3 MS Windows XP BroadBand Connection”
Mac OS X PPPoE dial-in client	Mac OS X	“3.4 Mac OS X PPPoE Dial-in Client”

Embedded PPP dial-in clients

The SpeedTouch™'s embedded PPP dial-in client allows you to establish an Internet connection for computers residing on your local network, using only one computer of the network to control the client.

If this computer runs:

- ▶ Any Operating System
you can always use the SpeedTouch™ web pages.
See [“3.1 SpeedTouch™ Web Pages” on page 23](#) to proceed.
- ▶ MS Windows XP
you can use MS Windows XP's Internet Gateway Device Control Client.
See [“3.2 IGD Control Agent” on page 25](#) to proceed.

Broadband host PPPoE dial-in clients

You can also connect to the Internet using a Broadband PPPoE dial-in application. The PPP over Ethernet connection scenario provides PPP-like dial-in behaviour over the virtual Ethernet segment.

To be able to use a broadband dial-in application on your computer for connecting to the Internet, the SpeedTouch™ needs to be configured for Bridged Ethernet or Routed PPPoE (with PPPoE relay) via the SpeedTouch™ Home Install Wizard on the Setup CD or the embedded Easy Setup.

If this computer runs:

- ▶ MS Windows XP
you can use the MS Windows XP broadband dial-in client. See [“3.3 MS Windows XP BroadBand Connection” on page 27](#) for more information.
- ▶ Mac OS X
you can use a Mac OS X broadband dial-in client. See [“3.4 Mac OS X PPPoE Dial-in Client” on page 31](#) for more information.

- or -

- ▶ A broadband PPPoE dial-in client provided by your Service Provider to connect to the Internet



Upon availability of OS-specific PPPoE dial-in client applications, the latter method is Operating System independent.

For PPPoE session connectivity from a Mac OS 8.6/9.x, an MS Windows 95/98(SE)/ME/2000 or a Linux system, a host PPPoE dial-in application is mandatory.

3.1 SpeedTouch™ Web Pages

Introduction


As the SpeedTouch™ web pages are controllable from any Operating System with an installed web browser, the method to establish PPP sessions described below you can use on any computer system.

For more information on Internet connection setup, see the provided Installation and Setup Guide.

Starting an Internet session

Proceed as follows:

- 1 Open a web browser on your computer and browse to the SpeedTouch™ web pages (see “1.3.1 Access via the Web Interface” on page 11 for more information):

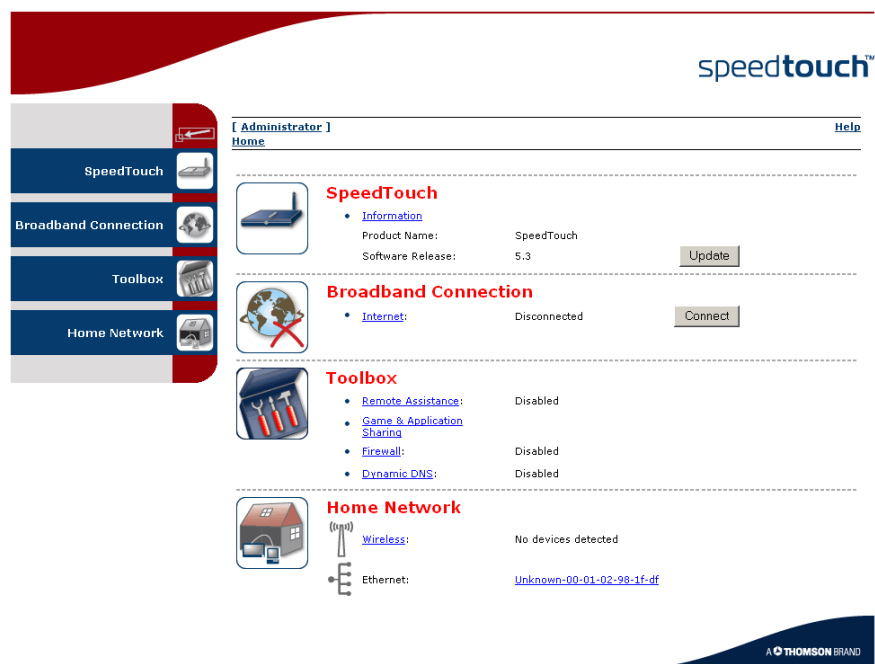

By default the SpeedTouch™ shows you the **Home** page.

- 2 Click **Connect** at the appropriate broadband connection.
You might be requested to enter your user name and password.
As a result SpeedTouch™'s embedded PPP dial-in client establishes the Internet connection.
- 3 Now you can surf the Internet.

Monitoring your Internet connection

You are able to overview and monitor your Internet connectivity as long as the session is running via:

- ▶ The SpeedTouch™ System Information page: see “4.3.1 Information” on page 42.
- ▶ The SpeedTouch™ Diagnostics task: see “4.4.1 Connectivity Check” on page 51.

Terminating an Internet session

To close an active PPP connection:

- 1** Go to the SpeedTouch™ Home page.
- 2** Click **Disconnect** at the appropriate broadband connection.

As a result the SpeedTouch™'s embedded PPP dial-in client will close the Internet connection. The Internet Link status will change to **Disconnected** and your PC is off-line.

3.2 IGD Control Agent

Introduction

MS Windows XP users can easily establish PPP sessions, thanks to MS Windows XP's Internet Gateway Device (IGD) Discovery and Control Client that allows you to control the SpeedTouch™ directly from your PC.



The IGD control client only allows to connect or to disconnect a fully configured connection.

Preconditions


Following conditions must be met:

- ▶ Following subcomponents of Windows XP's Networking Services must be added to your Windows XP system:
 - ▶ UPnP™ (see "SpeedTouch™ not detected by UPnP™ or IGD Control Client" on page 83).
 - ▶ IGD Discovery and Control Client (see "Adding IGD Discovery and Control" on page 84).
- ▶ UPnP™ must be enabled on your SpeedTouch™. To enable UPnP, see "4.5.2 Game & Application Sharing" on page 57.

Starting an Internet session

Proceed as follows:

- 1 In the Windows task bar, click **Start**.
- 2 Select **(Settings >) Control Panel**.
- 3 The **Control Panel** window appears. Go to **(Network and Internet Connections >) Network Connections**.
- 4 The **Network Connections** window appears:

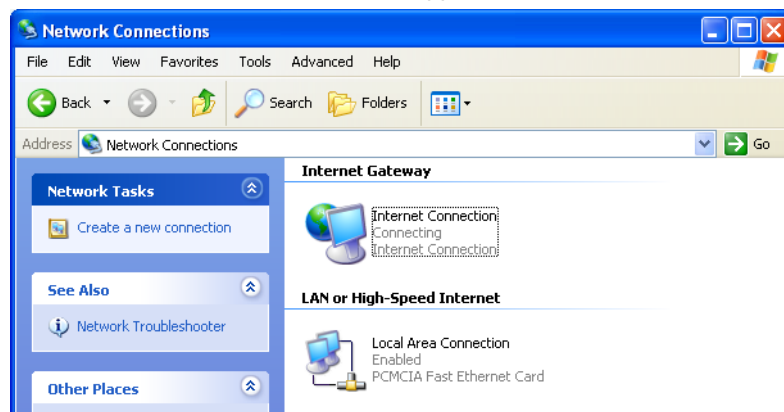

You will find an **Internet Gateway** icon, representing the SpeedTouch™ IGD Internet connection ability.

- 5 Double-click the **Internet Connection** icon.

As a result the SpeedTouch™'s embedded PPP dial-in client establishes the Internet connection. The **Internet Gateway** icon displays **connected** and your PC is online.

- 6 You can open a web browser and surf the Internet.


Internet connection status

As long as the SpeedTouch™'s embedded PPP dial-in client is connected, you are able to overview the connection status and some counters by double-clicking the **Internet Connection** icon in your PC's **Network Connections** window:



Terminating an Internet session

Proceed as follows:

- 1** In the Windows task bar, click **Start**.
- 2** Select **(Settings >) Control Panel > (Network and Internet Connections >) Network Connections**.
- 3** In the **Network Connections** window, right-click the **Internet Connection** icon and select **Disconnect to close the session**.
 You can also double-click the icon. Then the **Internet Connection Status** window will appear on which a **Disconnect** button is available to close the session.
- 4** As a result the SpeedTouch™'s embedded PPP dial-in client will close the Internet connection. The **Internet Gateway** icon displays **Disconnected** and your computers are off-line.

3.3 MS Windows XP BroadBand Connection

Prerequisites

To be able to use the MS Windows XP BroadBand Connection, your SpeedTouch™ must be configured for either:


- ▶ Bridging, or
- ▶ PPPoE Relay

Configuring a broadband connection

Proceed as follows:


- 1** On the **Start** menu, click **(Settings >) Control Panel**.
- 2** The **Control Panel** window appears. Go to **(Network and Internet Connections >) Network Connections**.
- 3** In the **Network Tasks** menu, click **Create a new connection**.

The **New Connection Wizard** appears:

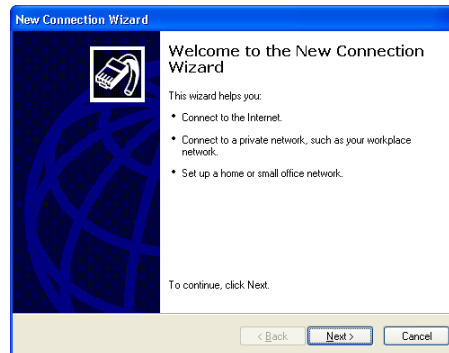


Click **Next**.

- 4** Select **Connect to the Internet** and click **Next**.
- 5** Select **Set up my connection manually** and click **Next**.
- 6** Select **Connect using a broadband connection that requires a user name and password** and click **Next**.
- 7** Give a name to the connection you are creating, for example YourISP:

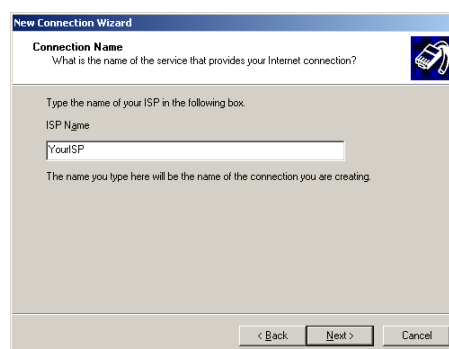

- 8 Select whether the connection will be available to any user or only to yourself:

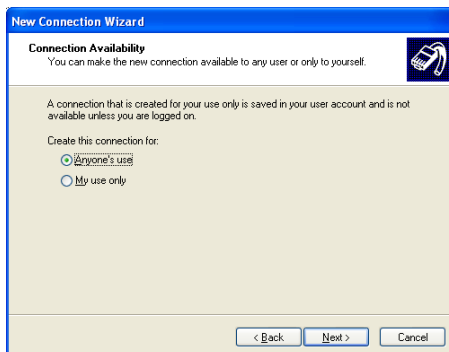

New Connection Wizard

Connection Availability
You can make the new connection available to any user or only to yourself.

A connection that is created for your use only is saved in your user account and is not available unless you are logged on.


Create this connection for:

☒ Anyone's use

☐ My use only

< Back Next > Cancel

- 9 Fill in the Internet account information. This information should be provided by your service provider:

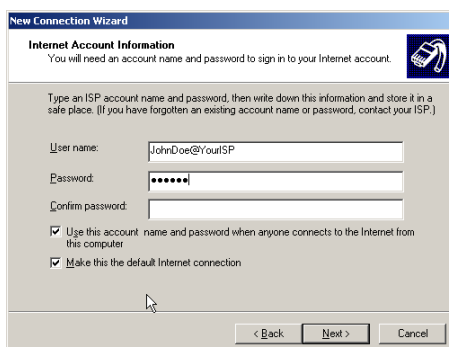

New Connection Wizard

Internet Account Information
You will need an account name and password to sign in to your Internet account.

Type an ISP account name and password, then write down this information and store it in a safe place. (If you have forgotten an existing account name or password, contact your ISP.)

User name:

Password:

Confirm password:

☒ Use this account name and password when anyone connects to the Internet from this computer.

☒ Make this the default Internet connection.

< Back Next > Cancel

- 10 At the end of the configuration the following window appears:



New Connection Wizard

Completing the New Connection Wizard

You have successfully completed the steps needed to create the following connection:

MyISP

- Make this the default connection
- This connection is firewalled
- Share with all users of this computer
- Use the same user name & password for everyone

The connection will be saved in the Network Connections folder.

☐ Add a shortcut to this connection to my desktop

To create the connection and close this wizard, click Finish.

< Back Finish Cancel

Click **Finish** to complete the configuration.

The Connect **YourISP** window (see below) appears.

Starting a broadband Internet session

Proceed as follows:

- 1 On the **Start** menu, point **Connect To** and click the name of the connection you've created, for example YourISP.



If you are using the **Classic Start** menu click **Start > Settings > Network (and Dial-up) connections > YourISP**.

- 2 The **Connect YourISP** window appears:



- 3 If requested, enter user name and password for your user account at the Service Provider.
- 4 Click **Connect**.
- 5 As soon as the connection is established, the **Connection** message box and **Dialup** window are minimised into an icon in the notification area:



- 6 You can open your web browser and surf the Internet.

Terminating a broadband Internet session


Proceed as follows:

- 1 On the **Start** menu, point **Connect To** and click the name of the connection you've created, for example YourISP.



If you are using the **Classic Start** menu go to **Start > Settings > Network (and Dial-up) connections > YourISP**.

- 2 The **YourISP Status** window appears:

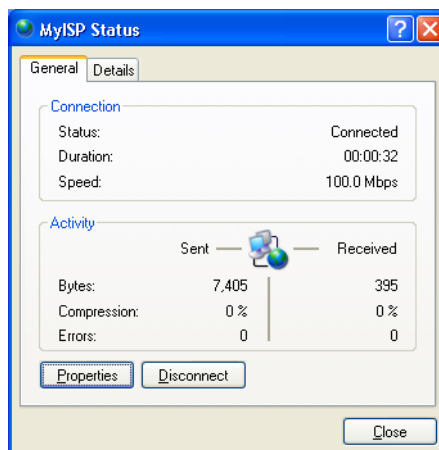

- 3 Click **Disconnect**.
- 4 The connection is released. As a result no Internet connectivity exists any more.

3.4 Mac OS X PPPoE Dial-in Client

Prerequisites


To be able to use the MS Windows XP BroadBand Connection, your SpeedTouch™ must be configured for either:


- ▶ Bridging, or
- ▶ PPPoE Relay

Configuring a broadband connection

Proceed as follows:

- 1** On the **Apple** menu, click **System Preferences**.
- 2** In the **System Preferences** window, click the **Network** icon.
- 3** The **Network** window appears. Make sure **Built-in Ethernet** is selected in the **Show** list and click the **PPPoE** tab:

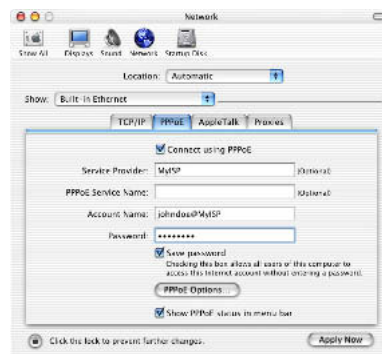

- 4** Enter the **Account Name** and **Password** provided by your **Service Provider**.
 Select **Save password** in case you want the computer to remember the password for this account name.
 Optionally you can enter a name for this connection in the **Service Provider** field. All other fields may stay empty.
- 5** Click **Apply Now**.

Starting a broadband Internet session


Proceed as follows:

- 1 Click the **Internet Connect** dockling.



If the **Internet Connect** dockling is not available, go to the **Applications** folder on the system startup disk and double-click **Internet Connect**.

- 2 The following window appears:

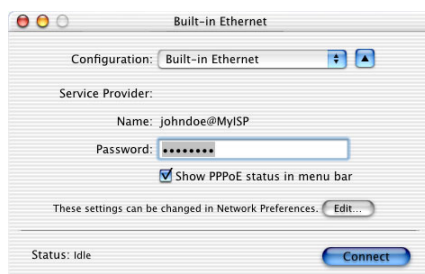

Make sure **Built-in Ethernet** is selected in the **Configuration** list.

- 3 If needed, enter user name and password for your user account at the Service Provider.
- 4 Click **Connect**.
- 5 As soon as the connection is established you can open your web browser and surf the Internet.

Terminating a broadband Internet session

Proceed as follows:

- 1 Click the **Internet Connect** dockling.



If the **Internet Connect** dockling is not available, go to the **Applications** folder on the system startup disk and double-click **Internet Connect**.

- 2 The following window appears:



Make sure **Built-in Ethernet** is selected in the **Configuration** list

- 3 Click **Disconnect**.
- 4 The connection is released. As a result no Internet connectivity exists any more.

4 SpeedTouch™ Web Interface

Introduction

The SpeedTouch™ comes with embedded HTML pages, providing an interface to the software installed on the device. It allows easy setup and management of the SpeedTouch™ via your web browser from any PC connected to the SpeedTouch™. See “1.3.1 Access via the Web Interface” on page 11 to access the pages.

SpeedTouch™ documentation

Consult:


- ▶ The SpeedTouch™ Installation and Setup Guide for more information on setup and installation procedures.

4.1 Navigation

Navigation components

The SpeedTouch™ web interface consists of following components:

- ▶ Menu
- ▶ Language Bar
- ▶ Navigation Bar
- ▶ Notification Area
- ▶ Tasks

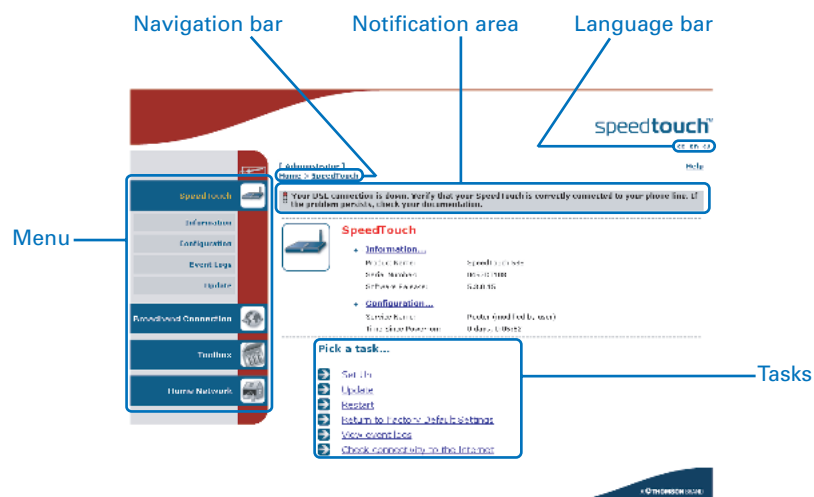

4.1.1 Menu

Menu items The menu is located on the left side of the page and consists of the following menu items:

- ▶ **SpeedTouch:**
Provides basic information on the SpeedTouch™.
- ▶ **Broadband Connection:**
Allows you to view/configure your broadband connections.
- ▶ **Toolbox:**
Allows you to assign games or applications to a device and secure your Internet connection.
- ▶ **Home Network:**
Allows you to manage your local network.

**Collapsing and
expanding the menu**

You are able to collapse/expand the menu by clicking the arrow located on the top of the menu.



4.1.2 Language Bar

Language bar

The language bar is located under the SpeedTouch™ logo and allows you to change the language of the SpeedTouch™ web interface.



The language bar will only be shown if more than one language is available.

4.1.3 Navigation Bar

Navigation bar	<p>The navigation bar is located on the top of the page and allows you to:</p> <ul style="list-style-type: none"> ▶ View the current user name. Click this name to change your password or switch to another user. ▶ View the current position on the SpeedTouch™ web interface. ▶ Get context related Help information.
Display level	<p>Depending on the page you are viewing following buttons will be available:</p> <ul style="list-style-type: none"> ▶ Overview to view a summary of the current status or configuration. ▶ Details to view more detailed information on the current status or configuration. ▶ Configure to change the current settings.

4.1.4 Notification Area

Notification area

The notification area is located under the [Navigation Bar](#) and is used to display:

- ▶ Error messages indicated by a red traffic light.
- ▶ Warnings indicated by an orange traffic light.
- ▶ Information indicated by a green traffic light.



If none of these events occur, the notification area will not be shown.

4.1.5 Tasks


Tasks To allow a swift configuration of your SpeedTouch™, some pages may offer you a number of related tasks. These tasks will guide you to the page where you can perform the selected task.

4.2 Home

SpeedTouch™ home page

The SpeedTouch™ home page gives you a short overview of all the configurable aspects of the SpeedTouch™:

- ▶ SpeedTouch
- ▶ Broadband Connection
- ▶ Toolbox
- ▶ Home Network

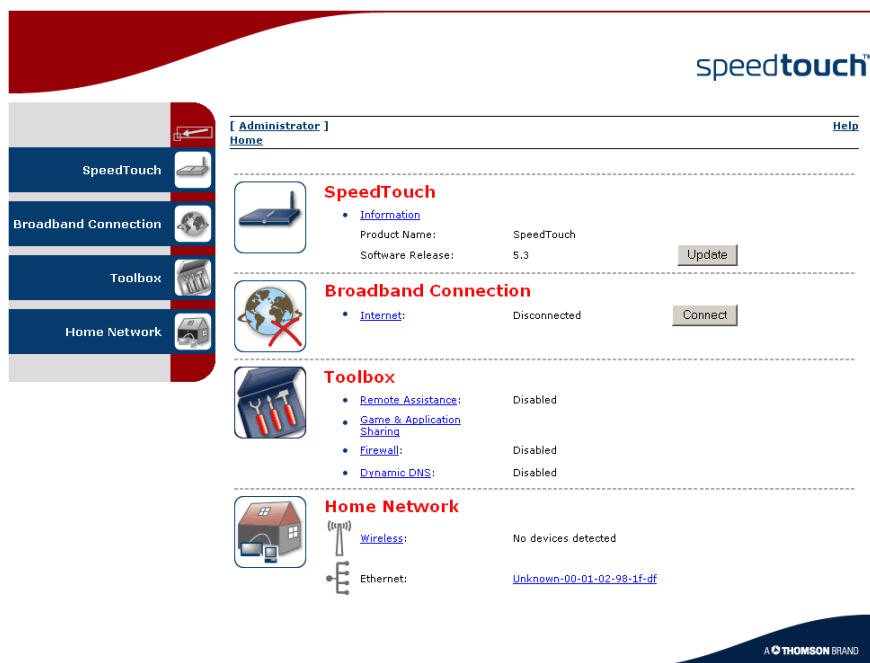

speedtouch™

[Administrator] [Help](#)

[Home](#)

SpeedTouch

- [Information](#)

Product Name: SpeedTouch

Software Release: 5.3 [Update](#)

Broadband Connection

- [Internet:](#) Disconnected [Connect](#)

Toolbox

- [Remote Assistance:](#) Disabled
- [Game & Application Sharing](#)
- [Firewall:](#) Disabled
- [Dynamic DNS:](#) Disabled

Home Network

[Wireless:](#) No devices detected

[Ethernet:](#) [Unknown-00-01-02-98-1f-df](#)

A THOMSON BRAND

4.3 SpeedTouch

The SpeedTouch menu

The **SpeedTouch** menu consists of following items:

- ▶ Information
- ▶ Configuration
- ▶ Event Logs
- ▶ Update

The SpeedTouch page

The **SpeedTouch** page gives you some basic information on the SpeedTouch™:

- ▶ Product Information
- ▶ Configuration



The screenshot shows the SpeedTouch web interface. On the left is a navigation menu with the following items: SpeedTouch (highlighted), Information, Configuration, Event Logs, Update, Broadband Connection, Toolbox, and Home Network. The main content area is titled "speedtouch™" and includes a breadcrumb trail: [Administrator] > Home > SpeedTouch. Below this is a section titled "SpeedTouch" with a router icon. It contains two main sections: "Information..." and "Configuration...". The "Information..." section displays the following details: Product Name: SpeedTouch 585, Serial Number: 0452DT108, and Software Release: 5.3.0.15. The "Configuration..." section displays: Service Name: Routed PPPoE on 0/35 and 6/35 (modified by user) and Time Since Power-on: 0 days, 0:21:31. Below these sections is a "Pick a task..." section with five links: Set Up, Update, Restart, Return to Factory Default Settings, and View event logs. At the bottom right of the page, there is a "Check connectivity to the Internet" link. The Thomson logo is visible in the bottom right corner of the page.

4.3.1 Information

Information

The **Information** page summarizes important information on your SpeedTouch™. You may need this information when you contact your helpdesk.



System Information
This page summarizes important information on your SpeedTouch. You may need this information when you contact your helpdesk.

Product Name:	SpeedTouch 585
Serial Number:	0452DT108
Software Release:	5.3.0.15
Software Variant:	AA
Boot Loader Version:	1.0.16
Product Code:	35723430
Board Name:	BANT-K

4.3.2 SpeedTouch™ Easy Setup

Easy Setup Wizard

This wizard helps you configure your SpeedTouch™ Internet connection.

To configure the SpeedTouch™ using the SpeedTouch™ Easy Setup wizard:

- 1** On the left menu, click **SpeedTouch**.
- 2** In the **Pick a task...** list, click **Set up**.
- 3** The **Easy Setup** wizard will now guide you through the configuration of your SpeedTouch™.



4.3.3 Restart

Accessing the Restart page

Proceed as follows:

- 1 On the left menu, click **SpeedTouch**.
- 2 In the **Pick a task...** list, click **Restart**.



Warning: System Restart

You are about to restart your SpeedTouch. All active connections will be restarted.

Do you want to proceed?

Yes, restart my SpeedTouch

No

Restarting your SpeedTouch™

Proceed as follows:

- 1 Click **Yes, restart my SpeedTouch**.
- 2 The SpeedTouch™ restarts.
- 3 The SpeedTouch™ returns to the [Home](#) page.

4.3.4 Configuration

-
- Overview** The **Overview** page displays the current configuration of your SpeedTouch™.
-
- Details** The **Details** page displays more detailed information on the current configuration of your SpeedTouch™.
-
- Configure** The **Configure** page allows you to change the current configuration.
-



System Configuration

This page lets you configure your SpeedTouch.

- **Service Configuration**

You cannot directly edit the service settings of your SpeedTouch. In order to modify those settings, you must use the [Configuration Wizard](#) and follow the instructions appearing on the screen.

Service Name: Router

- **Time Configuration**

Auto-configuration: ☐

Date (dd-mm-yyyy): - -

Time (hh:mm:ss): : :

Timezone: (UTC+01:00) Amsterdam, Bern, Rome, Stc ▼

Summer Time: ☐

- **System Configuration**

Web Browsing Interception: ☒

Apply Cancel

If you want to:

- ▶ Reconfigure your SpeedTouch™:
Click **Configuration Wizard** under **Service Configuration**. For more information, see “4.3.2 SpeedTouch™ Easy Setup” on page 43.
- ▶ Configure the time settings of your SpeedTouch™:
 - ▶ Select **Auto-configuration** if you want the SpeedTouch™ to use a time server to synchronise its clock to a dedicated time server.
 - ▶ Clear **Auto-configuration** to manually configure the SpeedTouch™ time settings.
- ▶ Disable web browsing interception or set it to automatic

Click **Apply** to save your settings.

4.3.5 Backup & Restore

Introduction

This page allows you to:

- ▶ Save your current configuration.
- ▶ Restore a previously saved configuration.



Backup & Restore

This page enables you to save and restore the configuration of your SpeedTouch. Follow instructions below...

- **Backup current configuration**

In order to store the current configuration of your SpeedTouch, click on the 'Backup Configuration Now...' button. You will be prompted by your web browser to store the configuration file locally on your hard disk. Choose a location and store the file on your computer.

Backup Configuration Now...

- **Restore saved configuration**

You can restore a configuration file you have previously stored on your computer.

Click on 'Browse', choose the configuration file you want to restore on your SpeedTouch and click on 'Restore Configuration Now...' to restore the configuration.

Configuration File:

Browse...

Restore Configuration Now...

Accessing the Backup & Restore page

Proceed as follows:

- 1** On the **SpeedTouch** menu, click **Configuration**.
- 2** Click **Configure**.
- 3** In the **Pick a task...** list, click **Save or Restore Configuration**.

Saving your current configuration

Proceed as follows:

- 1** Click **Backup Configuration Now**.
- 2** Click **Save**.
- 3** Choose a location to save your backup file and click **Save**.

Restoring a previously saved configuration

Proceed as follows:

- 1** Click **Browse**.
- 2** Select the configuration file you want to restore and click **Open**.
- 3** Click **Restore Configuration Now...**
- 4** The SpeedTouch™ loads your configuration and restarts.
- 5** At the end of the procedure, the SpeedTouch™ returns to the [Home](#) page.

4.3.6 Reset to Factory Defaults

Introduction

This page allows you to reset the SpeedTouch™ to return to the initial configuration of your SpeedTouch™. All your changes will be deleted.



Warning: Reset to Factory Defaults

You are about to reset your SpeedTouch to factory default settings. All active connections will be disconnected.

Do you want to proceed?

Yes, reset my SpeedTouch

No

Accessing the Reset to Factory Defaults page

Proceed as follows:

- 1** On the left menu, click **SpeedTouch**.
- 2** In the **Pick a task...** list, click **Return to Factory Default Settings**.

Resetting the SpeedTouch™ to factory defaults

If you want to reset your SpeedTouch™ to factory defaults, click **Yes, reset my SpeedTouch**.




If you reset your SpeedTouch™ to factory default settings, all active connections will be disconnected.

4.3.7 Event Logs

Event Logging

The **Event Logs** page summarizes the latest events recorded on your SpeedTouch™.








Event Logging

This page summarizes the last events that have been recorded on your SpeedTouch. Choose a display filter...




Category:

- Recorded Events**

	Time	Message
	00:23:11 (since last boot)	DHCS server up
	00:23:10 (since last boot)	DHCS server went down
	00:00:04 (since last boot)	DHCS server up
	00:00:03 (since last boot)	WIRELESS interface turned on.
	00:00:03 (since last boot)	WIRELESS automatic channel selection done (channel = 1)

Recorded Events table

The **Recorded Events** table gives you an overview of the latest event logs that have been recorded since power on. The first column of the table indicates the importance of the event log

Indicator	Description
	Informational
	Warning
	Error

 
The **Category** list allows you to filter the events shown in the **Recorded Events** table. For example, by clicking **Security** you can view all security related events, for example generated by the SpeedTouch™ firewall.

4.3.8 Update

Updating the
SpeedTouch™ system
software

The **Update** page allows you to:

- ▶ View System Information.
- ▶ View information on the current System Firmware.
- ▶ Update your SpeedTouch™ from a remote server.
Use this option if you want to have your SpeedTouch™ check on the internet for new firmware and update if it found one.
- ▶ Update from a PC.
Use this option if you want to install on your SpeedTouch™ that is located on the PC.



System Update

This page allows you to update your SpeedTouch with the latest software version available. Choose a way to update your SpeedTouch and follow the instructions.

• System Information

Product Name:	SpeedTouch 585
Serial Number:	0452DT108
Boot Loader Version:	1.0.16
Product Code:	35723430
Board Name:	BANT-K

• System Firmware

Current Software Version:	5.3.0.15
Current Software Variant:	AA
Available Software Version:	No update available

Update SpeedTouch from remote server...



To check if a new software version is available click on 'Check For Updates...'

Check For Updates

Upgrade from PC



To update your SpeedTouch from your PC, you may follow the three steps described below.

1-Download the latest software to your PC.

You may update your SpeedTouch by downloading the latest software from the [SpeedTouch Support Site](#) to your PC's hard drive.

2-Upload software to your SpeedTouch

Select the update file you have placed on your PC's hard drive.

Browse...

3-Load the new software and restart your SpeedTouch

Note: uploading the new software takes several minutes to complete.

Proceed

4.4 Broadband Connection

The Broadband Connection menu

The **Broadband Connection** menu consists of following menu items:

- ▶ DSL Connection
- ▶ Internet Services

The Broadband Connection page

The **Broadband Connection** page gives you a short status overview of the connections configured on the SpeedTouch™.



The screenshot shows the SpeedTouch web interface. On the left is a navigation menu with items: SpeedTouch, Broadband Connection (highlighted), DSL Connection, Internet Services, Toolbox, and Home Network. The main content area is titled 'Broadband Connection' and shows two sections: 'DSL Connection' and 'Internet'. Each section has a 'View more...' link and displays connection statistics. The 'Internet' section also has a 'Disconnect' button. At the bottom, there is a 'Pick a task...' section with a link to 'Check connectivity to the Internet'.

DSL Connection

- [View more...](#)
- Uptime: 0 days, 0:24:01
- Bandwidth (Up/Down) [kbps/kbps]: 544 / 2.272
- Data Transferred (Sent/Received) [KB/KB]: 0,00 / 0,00

Internet

- [View more...](#)
- Type: PPPoE
- Uptime: 0 days, 0:01:43
- IP Address: 101.101.101.39
- Data Transferred (Sent/Received) [B/B]: 0 / 0

[Disconnect](#)

Pick a task...

[Check connectivity to the Internet](#)

Click **View more** to see more information on the selected broadband connection.



If you configured a dial-up connection, you are able to establish/terminate the connection by clicking **Connect/Disconnect**.

4.4.1 Connectivity Check

Introduction

This page enables you to perform a connectivity check on an Internet service of your SpeedTouch™.



Connectivity Check

This page enables you to perform a connectivity check on an Internet service of your SpeedTouch.

Choose an Internet service and click the button to launch the tests.

Internet Service to Check:

Internet

Check Connectivity

Accessing the Connectivity Check page

Proceed as follows:

- 1 On the left menu, click **Broadband Connection**.
- 2 In the **Pick a task...** list, click **Check connectivity to the Internet**.

Checking your Internet Connectivity

Proceed as follows:

- 1 In the **Internet Service to Check** list, click the Internet service that you want to check.
- 2 Click **Check Connectivity**.
- 3 The SpeedTouch™ lists the test results in the **Test Results** list.

Analysing the test results

If the test is successful, you will get a list of green check marks. Otherwise a red cross will indicate which tests have failed.



Connectivity Check

This page enables you to perform a connectivity check on an Internet service of your SpeedTouch.

Choose an Internet service and click the button to launch the tests.

Internet Service to Check:

Internet

Check Connectivity

• Test Results



DSL



ATM



Ethernet



PPP



IP



Internet



Connectivity to Gateway (101.101.101.1)



Connectivity to DNS Server 1 (10.50.2.20)



Connectivity to DNS Server 2 (10.50.2.21)

4.4.2 DSL Connection

Overview Click **Overview** to view brief information on your DSL connection.

Details Click **Details** to view a more detailed information on your DSL connection.



DSL Connection

• **Link Information**

Uptime:	0 days, 0:43:10
Modulation:	G.992.1 Annex A
Bandwidth (Up/Down) [kbps/kbps]:	544 / 2.272
Data Transferred (Sent/Received) [KB/KB]:	0,00 / 0,00
Output Power (Up/Down) [dBm]:	11,5 / 7,5
Line Attenuation (Up/Down) [dB]:	2,0 / 0,0
SN Margin (Up/Down) [dB]:	5,0 / 6,5
Vendor ID (Local/Remote):	TMMB / ALCB
Loss of Framing (Local/Remote):	0 / 0
Loss of Signal (Local/Remote):	0 / 0
Loss of Power (Local/Remote):	0 / 0
Loss of Link (Remote):	0
Error Seconds (Local/Remote):	0 / 0
FEC Errors (Up/Down):	0 / 0
CRC Errors (Up/Down):	0 / 0
HEC Errors (Up/Down):	0 / 0

4.4.3 Internet Services

Internet Services information

The **Internet Services** page displays information on your Internet Connection(s).



Internet

Disconnect

- [View more...](#)

Type:	PPPoE
Uptime:	0 days, 0:21:48
IP Address:	101.101.101.39
Data Transferred (Sent/Received) [KB/B]:	3,39 / 282



If you configured a dial-up connection you are able to establish/terminate the connection by clicking **Connect/Disconnect**.

To view more detailed information on a specific connection, click the **View more...** link of the corresponding connection.

4.4.4 Internet Service Settings

Accessing the Internet
Service Settings page

Proceed as follows:

- 1 On the **Broadband Connection** menu click **Internet Services**.
- 2 Click the **View more** link of the internet service you want to view.

Overview

The **Overview** page gives you basic information on the selected Internet Service.



If you configured a connection you are able to establish/terminate the connection by clicking **Connect/Disconnect**.

Details

The **Details** page gives you more detailed information on the selected Internet Service.



Internet

Disconnect

- **Connection Information**

Uptime: 0 days, 0:22:44
Data Transferred
(Sent/Received) [KB/B]: 3,39 / 282

- **Connection Settings**

PVC Info (VPI.VCI): 8.35
Type: PPPoE

- **PPP Settings**

Username: cpesit@rednet
Password: *****
Connection Mode: Always-On
Service Name: -
Concentrator Name: 15031100007146-Redback

- **TCP/IP Settings**

IP Address: 101.101.101.39/32
Default Gateway: 101.101.101.1
Primary DNS: 10.50.2.20
Secondary DNS: 10.50.2.21



If you configured a dial-up connection you are able to establish/terminate the connection by clicking **Connect/Disconnect**.

4.5 Toolbox


The Toolbox menu

The **Toolbox** menu consists of following menu items:

- ▶ **Remote Assistance:**
Allows you to make your SpeedTouch™ accessible for remote support.
- ▶ **Game & Application Sharing:**
Allows you to share services and games that you run in your private network towards the internet.
- ▶ **Firewall:**
Allows you to configure the security level of the SpeedTouch™ firewall.
- ▶ **Dynamic DNS:**
Allows you to assign a DNS host name to your broadband connection(s).
- ▶ **User Management:**
Allows you to manage the users configured on your SpeedTouch™.

The Toolbox page

The **Toolbox** page gives you an overview of the available services and their current status. You can click on the names of these services to go to the corresponding web page.

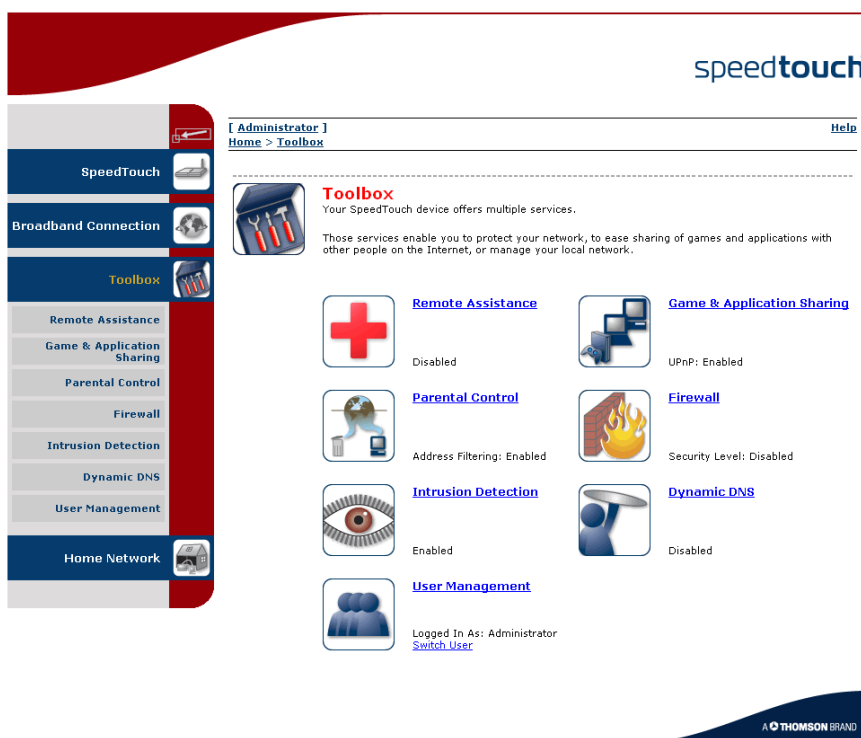

4.5.1 Remote Assistance

Enabling Remote Assistance

This page allows you to make your SpeedTouch™ accessible for remote support.



Remote Assistance

Remote assistance is currently disabled.

By clicking on the 'Enable Remote Assistance' button your SpeedTouch will be accessible from your broadband connection. After 20 minutes of inactivity, or on reboot, remote assistance will be automatically disabled.

Provide the following parameters to your ISP:

URL:
 Username:
 Password:

Enable Remote Assistance

Quit



You must be connected to the Internet to be able to enable remote assistance.

To use remote assistance:

- 1** If needed, type a password in the **Password** box.
- 2** Click **Enable Remote Assistance**.
- 3** Pass the information listed under:

- ▶ **URL**
- ▶ **Username**
- ▶ **Password**

to your technical support, in order for them to be able to access your SpeedTouch™.



Once the technical support is connected, no other connections are possible.

- 4** The remote assistance session ends:
 - ▶ If the technical support disables remote assistance.
 - ▶ After 20 minutes of inactivity, or after a reboot, remote management.

4.5.2 Game & Application Sharing

Overview The **Overview** page summarizes the games and applications on a particular host on your network, for which the SpeedTouch™ accepts connections coming from the Internet.

Configure The **Configuration** page allows you to:

- ▶ Select **Use UPnP** to enable UPnP on the SpeedTouch™.



Universal Plug and Play is an architecture for transparent peer-to-peer connectivity of PCs, intelligent appliances, and (wireless) devices. It enables seamless operation of a wide range of games and messaging applications.

- ▶ Select **Use Extended Security** to only allow the creation of port maps.
- ▶ Assign a game or application to a specific network device.



Game & Application Sharing

This page summarizes the games and applications defined on your SpeedTouch. Each game or application can be assigned to a device on your local network.

• Universal Plug and Play

Universal Plug and Play (UPnP) is a technology that enables seamless operation of a wide range of games and messaging applications.

Use UPnP: ☒

Use Extended Security: ☐

Apply Cancel

• Assigned Games & Applications

Click on 'Unassign' to disable a game or a application or use the last row in the table to assign a game or application to a local network device.

If the game or the application you are looking for does not exist, [click here](#) to create it (you will be asked for game or application details).

Choose 'User-defined' in the device list and enter its IP address if the device you are looking for does not appear in the device list.

Game or Application	Device	Log		
FTP Server	YourPC	Off	Edit	Unassign
HTTP Server (World Wide Web)	YourPC	Off	Edit	Unassign
NetMeeting	YourPC	Off	Edit	Unassign
ABC (Another Bittorrent Client)	YourPC	<input type="checkbox"/>		Add

4.5.3 Defined Games & Applications

Accessing the Defined Games & Applications page

The Defined Games & Applications page

Proceed as follows:

- 1 In the Toolbox menu, click Game & Application Sharing.
- 2 In the Pick a task... list, click Modify a game or application.

This page gives you an overview of the games and applications defined on your SpeedTouch™. Each game or application can be assigned to a device on your local network.



Defined Games & Applications

This page summarizes the games and applications defined on your SpeedTouch. Each game or application can be assigned to a device on your local network.

Game or Application	Assigned to ...	Mode
ABC (Another Bittorent Client)	Client	Edit Delete
Age of Empires	Server	Edit Delete
Age of Mythology	Server	Edit Delete
AIM Talk	Client	Edit Delete
Aliens vs. Predator	Server	Edit Delete
America's Army	Server	Edit Delete
Azureus	Client	Edit Delete
Bay VPN	Server	Edit Delete
BearShare	Server	Edit Delete
BitTorrent	Client	Edit Delete
Black and White	Server	Edit Delete
Call of Duty	Server	Edit Delete
Call of Duty - United Offensive	Server	Edit Delete
CarbonCopy32	Server	Edit Delete
Castle Wolfenstein	Server	Edit Delete
Championship Manager 03-04	Server	Edit Delete
Checkpoint FW1 VPN	Server	Edit Delete
Command and Conquer Generals	Server	Edit Delete
Command and Conquer Zero Hour	Server	Edit Delete
Counter Strike	Server	Edit Delete
Cu-SeeMe Cornell	Server	Edit Delete
Cu-SeeMe White Pine 3.1.2 and 4.0	Server	Edit Delete
Dark Reign 2	Server	Edit Delete
Default Server	Server	Edit Delete
Delta Force	Server	Edit Delete
Destroyer Command	Server	Edit Delete
Diablo II	Server	Edit Delete
Direct Connect	Server	Edit Delete
DirectX 7	Server	Edit Delete
DirectX 8	Server	Edit Delete
DirectX 9	Server	Edit Delete
Doom3	Server	Edit Delete
Dune 2000	Server	Edit Delete
Dungeon Siege	Server	Edit Delete
eDonkey	Server	Edit Delete
Elite Force	Server	Edit Delete
eMule	Server	Edit Delete
Enemy Territory	Server	Edit Delete
Everquest	Server	Edit Delete

To:

- ▶ View the translation rules of a game or application, click the name of the rule.
- ▶ Change the translation rules of a game or application, click the Edit link of the the game or application.

4.5.4 Game or Application Definition

Accessing the Game or
Application Definition
page

Proceed as follows:

- 1 In the **Toolbox** menu, click **Game & Application Sharing**.
- 2 In the **Pick a task...** list, click **Modify a game or application**.
- 3 Click the name of the game or application you want to view/change.

Overview

This page gives you an overview of the port mappings used to allow this service or game to be initiated from the Internet.



Consult the user's guide or support pages of your application to know which ports are being used by this application.

A service is made of one or more TCP/UDP port ranges. Each incoming port range can be translated into a different internal (local network) port range. Port ranges can be statically assigned to devices or dynamically assigned using an outgoing trigger.

Configure

Under:

- ▶ **Game or Application Name** you can:
Change the name of the game or application.
- ▶ **Game or Application Definition** you can:
Change the TCP/UDP port definition for this game or application.



Lotus Notes

Game or Application Name

New Name:

Lotus Notes

Apply

Cancel

Game or Application Definition

A game or application is made of one or more TCP/UDP port ranges. Each incoming port range can be translated into a different internal (local network) port range. Port ranges can be statically assigned to devices or dynamically assigned using an outgoing trigger.

Protocol	Port Range	Translate To ...	Trigger Protocol	Trigger Port	
Any	1352 - 1352	1352 - 1352	-	-	Edit Delete
Any	<input type="text"/> to <input type="text"/>	<input type="text"/>	Any	<input type="text"/>	Add

Adding a Port Translation rule

Proceed as follows:

- 1 In the **Protocol** list, click the protocol the game or application uses.
- 2 In the **Port Range** box, type the port range the game or application uses.
- 3 In the **Translate To...** box, type the port range to which the SpeedTouch™ has to translate the ports specified under **Port Range**.
- 4 If you want to make a dynamic translation rule you must specify a trigger protocol and port.



As soon as the SpeedTouch™ receives outgoing traffic on this trigger port, it will activate this translation rule.

- 5 Click **Apply**.

4.5.5 New Game or Application

Accessing the Game or Application Definition

Proceed as follows:

- 1** On the **Applications** page, click **Game & Application Sharing**.
- 2** In the **Pick a task...** list, click **Create a new game or application**.



New Game or Application

Enter the name of the new game or application.

Name:

Select how you want to define the new game or application.

☒ Clone Existing Game or Application

☐ Manual Entry of Port Maps

Creating a new game or application

Proceed as follows:

- 1** Type the name of the game or application in the **Name** box.
- 2** Click:
 - ▶ **Clone Existing Game or Application** if you want to start from the port mappings of the selected game or application.
 - ▶ **Manual Entry of Port Maps** if you want to manually configure the port mapping for this game or application.
- 3** The SpeedTouch™ creates the game or application and takes you to the [Game or Application Definition](#) page to configure the port mappings for this game or application.
- 4** Enter the necessary port mappings and click **Add**.

4.5.6 Firewall

Overview The **Overview** page summarizes the overall security policy configured on your SpeedTouch™.

Configure The **Configure** page allows you to select the security level of the SpeedTouch™.



Firewall

This page summarizes the overall security policy configured on your SpeedTouch.

• Security Settings

Security Level:

☐ BlockAll

Use this Security Level to block all traffic from and to the Internet. Game & Application sharing is not allowed by the firewall.

☒ Standard

Use this Security Level to allow all outgoing connections and block all incoming traffic. Game & Application sharing is allowed by the firewall..

☐ Disabled

Disable the firewall. All traffic is allowed to pass through your SpeedTouch. Game & Application sharing is allowed by the firewall.

Apply

Cancel

Select one of following security levels:

- ▶ **Block All:** to protect your network from all attempts of incoming (from untrusted site) connection requests and to perform checks on outgoing (from trusted site) connections. This level is meant to prevent incoming malicious traffic.
- ▶ **Standard:** to protect your network from all incoming (from untrusted site) connection requests while permitting safe outgoing connections. This is the default.
- ▶ **Disabled:** to allow all incoming and outgoing traffic. This does not mean the complete SpeedTouch™ firewall is disabled. It means all traffic coming in on one interface and going out on another is allowed, but access to the embedded services of the SpeedTouch™ (as telnet, web interface,...) is only allowed for clients residing on the LAN side, so the SpeedTouch™ itself stays protected.
- ▶ **High:**
Use this Security Level to block all outgoing connections except well known applications (DNS, HTTP, HTTPS, FTP, TELNET, IMAP, POP) and block all incoming connections. Game & Application sharing is not allowed by the firewall.

4.5.7 Dynamic DNS

What is Dynamic DNS

The Dynamic DNS service allows you to assign a dynamic DNS host name (e.g. john.dyndns.org) to a broadband connection even if it is using a dynamic IP address. As soon as the device gets a new IP address, the dynamic DNS server updates its entry to the new IP address.

Overview

Click **Overview** to view the different Dynamic DNS clients with their name, hostnames, interface and IP address.

Configure

The **Configure** page allows you to assign a Dynamic DNS host name to a broadband connection:

- 1** Create an account at the Dynamic DNS service of your choice, for example:
 - ▶ www.dyndns.org
 - ▶ www.no-ip.com
 - ▶ www.dtdns.com
 - ▶ GnuDIP for Linux
- 2** On the **Dynamic DNS** page, click **Configure**.
- 3** Select **Enabled**.



Dynamic DNS Service

• Configuration

Enabled:	<input checked="" type="checkbox"/>
Interface:	<input type="text" value="Internet"/>
Username:	<input type="text" value="MyName"/>
Password:	<input type="password" value="••••••"/>
Confirm password:	<input type="password" value="••••••"/>
Service:	<input type="text" value="gnudip"/>
Host:	<input type="text" value="MyDomainName"/>

- 4** If needed, click the broadband connection to which you want to assign the Dynamic DNS hostname in the **Interface** list.
- 5** Type the user name and password of your Dynamic DNS service account in the corresponding fields.
- 6** In the **Service** list, click your Dynamic DNS service.
- 7** In the **Host** box, type the host name you want to assign to this interface (for example myspeedtouch.dyndns.org).
- 8** Click **Apply**.

4.5.8 User Management

Overview The **Overview** page gives you an overview of the currently configured users and their privileges.

Clicking the name of a user allows you to edit his user account.

Configure The **Configure** page allows you to:

- ▶ Click **Add** to create a new user account.
- ▶ Click **Delete** to remove a user.
- ▶ Click **Edit** to change a user account.



User Management

This page provides you with information regarding the users configured on your SpeedTouch.

Local User Data

The table below shows the configured users who are able to access your SpeedTouch. You need to configure user privileges if you want to differentiate between people using your SpeedTouch. The current privileges of the user are mentioned in the privileges column.

Username	Privileges	Default User	
Administrator	Administrator	✓	Edit
Jon	User		Edit Delete
Melissa	User		Edit Delete
Add			

4.5.9 Edit User

Accessing the User Edit page

Proceed as follows:

- 1 On the **Toolbox** menu, click **User Management**.
- 2 Under **Local User Data**, click on the name of the user you want to edit.



Edit User

This page allows you to edit the user settings. Besides resetting your password you're not allowed to change your own settings. If you want to have your settings changed, ask someone with higher privileges.

User definition

Name:	Jon
Administration Privileges:	User
<div>Reset Password Apply Cancel</div>	

Editing a user account

The **Edit User** page allows you to:

- ▶ Click **Reset Password** to reset the password of the selected user to the user name. So, if you reset the password of John his password will be "John".
- ▶ Change the administration privileges of the selected user.



You can not change the administration privileges of the account you are logged on to.

4.5.10 Change Default User

Changing the default user

This page allows you to change the default user. If users browse to the SpeedTouch™ web pages, they will be automatically logged in under this account.



Change Default User

This page allows you to change the default user. The default user is the user whose settings will be chosen as the default login settings.

- Change Default User

User Name:

Jon

Change Default User

Cancel



To allow users to automatically log on under this account, this default user account must be configured with a blank password.

4.5.11 Add User

Adding users

This page allows you to add a new user.



Add User

This page allows you to add a user. You're only allowed to add a user who has privileges which are the same or lower than your own. The password of the new user will be the same as the account name.

User definition

Name:

Administration Privileges:

Under **User definition** you can configure:

- ▶ The name of the new user.



The password of the new user will be equal to the user name; for example if the user name is John Doe, the password will be John Doe. Also when resetting a user, the password will be changed into the user name.

- ▶ The administration privileges of the new user



You can only add users with less than or equal administration privileges as yourself.

4.6 Home Network


Home Network Menu

This menu consists of following items:

- ▶ **Devices**
Allows you the view/configure the devices detected on your local network.
- ▶ **Interfaces**
Allows you to view/configure the interfaces that are available on the SpeedTouch™.

The Home Network page

The Home Network gives you an overview of your SpeedTouch™ network.

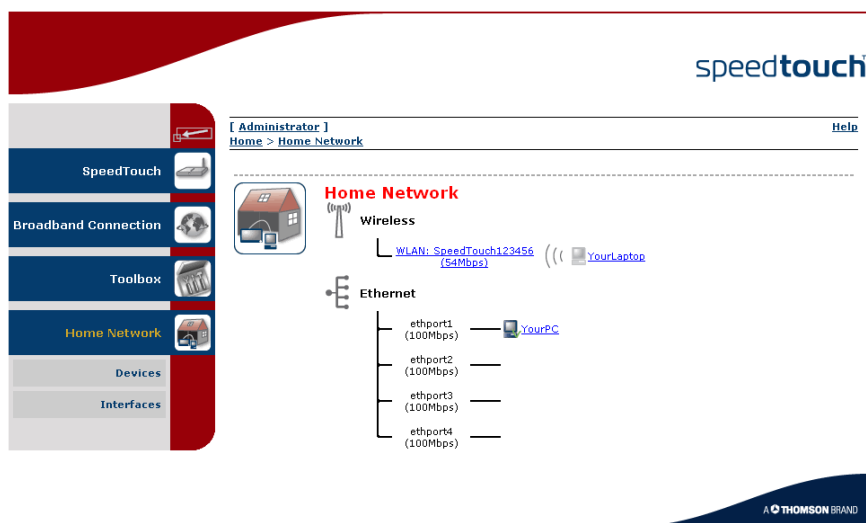

Viewing client information

If you click a on client you will be able to:

- ▶ View the client's network settings.
- ▶ Configure the client's network settings by clicking **Configure**.

4.6.1 Devices






Overview The **Overview** page gives you an overview of the devices that are currently connected to the SpeedTouch™ network. Click on a device name to get more information on a specific device.



Local Network Devices

• **Detected Device(s)**

The table below contains the list of devices the SpeedTouch detected on your local network. Click on a device name to get more information on a device.

Name	IP Address	Interface
 dsldevice	10.0.0.138	
 YourPC	192.168.1.10	 ethport1
 YourLaptop	192.168.1.64	 WLAN

Configure The **Configure** page gives you an overview of the devices that are currently connected to the SpeedTouch™ network.

To:

- ▶ Get more information on a specific device, click on the name of the device. See “4.6.2 Device Settings” on page 69 for more information.
- ▶ Edit a device from the **Detected Device(s)** list, click **Edit**.
- ▶ Delete a device from the **Detected Device(s)** list, click **Delete**.



Once a device connects to the SpeedTouch™ network, it will remain listed in the **Detected Device(s)** list until you delete it.

4.6.2 Device Settings

Accessing the device settings page

Proceed as follows:

- 1** On the **Network** menu, click **Devices**.
- 2** In the **Detected Device(s)**, click the name of the device you want to view.

Overview

The **Overview** page displays following information:

- ▶ **Information** allows you to view:
 - ▶ **Status** shows whether the device is currently connected to the SpeedTouch™ network.
 - ▶ **Type** shows the device type.
 - ▶ **Connected To** shows the interface to which the device is currently connected.
- ▶ **Addressing** allows you to view:
 - ▶ **Physical Address** shows the MAC address of the device.
 - ▶ **IP Address Assignment** shows whether the device is using a static or dynamic IP address.
 - ▶ **IP Address** shows the current IP address of the device.
- ▶ **Connection Sharing:**
Gives you an overview of the games or services that are currently assigned to this device. Click the name of the game or service to view the used port mappings.
For more information, see “4.5.4 Game or Application Definition” on page 59.

Configure

The **Configure** page allows you to:

- ▶ Change the device information.
- ▶ Allow a game or service running on this device to be initiated from the Internet.



John

• Information

New Name:
 Status:
 Type:
 Connected To:

• Addressing

Physical Address:
 IP Address Assignment:
 IP Address:

• Connection Sharing

Game or Service

4.6.3 Assign Public IP

Introduction

This page allows you to assign the public IP address of your Internet Connection(s) to a specific device on your local network. You might want to do this if:

- ▶ You do not want to use the Network Address Translation engine of your SpeedTouch™.
- ▶ This device is running server applications (web server,...) and you want it to be accessible from the Internet.



You can also achieve this by creating a port mapping for the specified server, as described in [“4.5.2 Game & Application Sharing”](#) on page 57.

- ▶ This device has to be considered as the unique access point to your local network (DMZ).



It is not recommended to use this feature as this device will loose all security offered by the SpeedTouch™.

Accessing the Assign Public IP page

Proceed as follows:

- 1** On the **Network** menu, click **Devices**.
- 2** In the **Pick a task...** list, click **Assign the public IP address of a connection to a device**.

Assigning the public IP address to a device

Proceed as follows:

- 1** Click the **Edit** link of your Internet connection.
- 2** In the **Device** list, select the device you want to assign the public address to.



Assign the public IP address of a connection to a LAN device

This page allows you to assign the public IP address of your Internet Connection(s) to a specific device on your local network...

You might want to do this if:

- You encounter issues with some applications through the Network Address Translation engine of your SpeedTouch.
- This device is running server applications (web server, ...) and you want it to be accessible from the internet.
- This device has to be considered as the unique entry to your local network (DMZ).

Internet Service	Device		
Internet	YourLaptop	Apply	Cancel

- 3** Click **Apply**.
- 4** The SpeedTouch™ prompts you that you will have to make some adjustments as a result of the new configuration, click **OK**.
- 5** Release and renew the IP address of the device.



For more information, see your operating system's user guide or help.

- 6** If needed, reassign server applications to this device.

4.6.4 Interfaces

Interfaces overview

This page gives you an overview of the interfaces used on your SpeedTouch™. If you want to know more on the network settings of a specific interface, click the name of the interface you want to view.



Interfaces

- [LocalNetwork](#)
 - ethport1 (100Mbps)
 - ethport2 (100Mbps)
 - ethport3 (100Mbps)
 - ethport4 (100Mbps)
 - WLAN: SpeedTouchD0D961 (54Mbps)

4.6.5 Interface Settings

Overview

The **Overview** page gives you an overview of the current interface settings.



Interface - LocalNetwork

- **Interface Information**

Interface Group: lan

- **TCP/IP Configuration**

Auto-IP: Disabled

Use DHCP Server: Enabled

- **IP Addresses**

IP Address/Mask	Type
10.0.0.138/24	Static
192.168.1.254/24	Static

- **DHCP Pools**

DHCP Pool Name	Address Range	Gateway
LAN_private	192.168.1.64 - 192.168.1.253	192.168.1.254

Configure

The **Configure** page allows you to:

- ▶ Change the IP address settings of the SpeedTouch™.
- ▶ Change the DHCP IP address pool settings.



Before changing the DHCP pools, make sure that at least one IP address of the SpeedTouch™ uses the same subnet as the IP addresses in the DHCP pools.

Assigning a new IP address to the SpeedTouch™

Under **IP Addresses**:

- 1** Type the IP address of your choice (for example 192.168.1.1) in the left text box.
- 2** Type subnet mask in the right text box (for example 255.255.255.0).
- 3** Click **Add**.
- 4** Network devices using the same subnet mask can now access the SpeedTouch™ using this IP address.

4.6.6 DHCP Pool

DHCP Pool This page allows you to create/change a DHCP pool.

Accessing the DHCP Pool page

Proceed as follows:

- 1** On the **Home Network** menu, click **Interfaces**.
- 2** Click on the name of the interface of which you want to change the DHCP pool settings.
- 3** Click **Configure**.



Your_DHCP_pool
Configure parameters for your DHCP pool.

• Pool Configuration

Interface:	<input type="text" value="LocalNetwork"/>
Start Address:	<input type="text" value="192.168.1.10"/>
End Address:	<input type="text" value="192.168.1.20"/>
Subnet Mask:	<input type="text" value="255.255.255.0"/>
Server:	<input type="text" value="192.168.1.254"/>
Gateway:	<input type="text" value="192.168.1.254"/>
Primary DNS:	<input type="text" value="192.168.1.254"/>
Secondary DNS:	<input type="text" value="0.0.0.0"/>
Primary WINS:	<input type="text" value="0.0.0.0"/>
Secondary WINS:	<input type="text" value="0.0.0.0"/>
Lease Time:	Infinite
Always give same address to DHCP clients:	<input checked="" type="checkbox"/>



- 4** Under **DHCP Pools** click:
 - ▶ **Add** if you want to add a new DHCP pool.
 - ▶ **Edit** if you want to edit an existing DHCP pool.
 - ▶ **Delete** if you want to delete an existing DHCP pool.



This link will only be shown if there are more than one DHCP pools.

The DHCP Pool page

Following settings are available for configuration:

- ▶ **Interface:**
The SpeedTouch™ interface for which the DHCP pool applies.
- ▶ **Start Address:**
The start IP address of the DHCP server's address pool.
- ▶ **End Address:**
The end IP address of the DHCP server's address pool.
 Both the start and end IP address define the IP address range used by the DHCP server to assign leases.
- ▶ **Subnet Mask:**
The subnet mask of the DHCP server's address pool.
- ▶ **Server:**
The SpeedTouch™ IP address used as DHCP server address.
- ▶ **Gateway:**
The IP address that will be assigned to the DHCP clients as their default gateway.
- ▶ **Primary DNS:**
The IP address of the primary DNS server.
- ▶ **Secondary DNS:**
The IP address of the secondary DNS server.
- ▶ **Primary WINS:**
The IP address of the primary WINS server.
- ▶ **Secondary WINS:**
The IP address of the secondary WINS server.
- ▶ **Lease Time:**
The time for which the DHCP client is allowed to use the assigned IP address:
 If **Always give same address to DHCP clients** the lease time will be automatically set to **Infinite**.
- ▶ **Always give same address to DHCP clients:**
Select this check box if you always want to use the same IP address for the DHCP clients.

5 Software Upgrade

Introduction	This chapter describes how to upgrade the SpeedTouch™ system software or firmware.
System software upgrades availability	<p>For the availability of new system software version packages you can:</p> <ul style="list-style-type: none"> ▶ Click the SpeedTouch Maintenance link, available on the Setup CD menu. ▶ Check for SpeedTouch™ upgrades at http://www.speedtouch.com/upgrade.
System software packages and security	<p>All system software packages for the SpeedTouch™ are digitally signed and encrypted. Packages that may have become corrupted, or been altered in any way, will not be accepted by the SpeedTouch™.</p> <p>This way the SpeedTouch™ or its service can never be corrupted or lost.</p>
System software upgrades	<p>Depending on the Operating System your computer is running, you can upgrade your SpeedTouch™ via:</p> <ul style="list-style-type: none"> ▶ The SpeedTouch™ Upgrade Wizard (Microsoft Windows or Mac OS X); see "5.1 Upgrade Wizard on Setup CD" on page 76 for more information.
Preliminary steps	<p>Before you start with upgrading the SpeedTouch™, always make sure:</p> <ul style="list-style-type: none"> ▶ To inform all people relying on the SpeedTouch™ services, that service may be down for some short period. ▶ The new system software file is stored on your local disk or another storage device.

5.1 Upgrade Wizard on Setup CD

Introduction

The procedures described in this section are valid only in case:

- ▶ You run an MS Windows Operating System or Mac OS X.
- ▶ Your SpeedTouch™ and computer are properly connected through Ethernet.

During the upgrade procedure in most cases configuration settings are backed up by the wizard and restored after uploading the system software.

Starting the Upgrade Wizard

To launch the SpeedTouch™ Upgrade Wizard:

- 1** Insert the Setup CD in your computer's CD-ROM or DVD-ROM drive. The SpeedTouch™ CD menu will pop up automatically.



If not:

- ▶ In MS Windows:

Click **Run** on the **Start** menu and enter the following path:

D:\Setup.exe where D stands for the drive letter of your CD-ROM or DVD-ROM drive.

- ▶ On Mac OS X

Double-click the CD icon and then double-click **Menu**.

- 2** Optionally, in the **Choose Language** window, select the language of your choice and click **OK**.
- 3** The SpeedTouch™ safety instructions will be displayed in your default web browser. Close the window.
- 4** Select **I have read and I fully understand the Safety Instructions and Regularity Information** and click **Continue**.
- 5** In the SpeedTouch™ CD Menu, click **SpeedTouch Maintenance**.
- 6** Click **Upgrade My SpeedTouch**, to start the SpeedTouch™ Upgrade Wizard.
- 7** See “[Upgrade procedure](#)” on page 77 to continue.

Upgrade procedure

- 1 In the **Welcome to the SpeedTouch Upgrade Wizard** window, click **Next**.




- 2 The SpeedTouch™ **Software License Agreement** window appears. You must accept before continuing. Click **Yes** to accept.



If you accepted this License Agreement in a previous upgrade, this window will not be shown.

- 3 The SpeedTouch™ Upgrade Wizard will search for the SpeedTouch™ on the network. A progress bar is displayed.
- 4 The SpeedTouch™ Upgrade Wizard should find your SpeedTouch™ device on the local network. This is indicated by the following window:

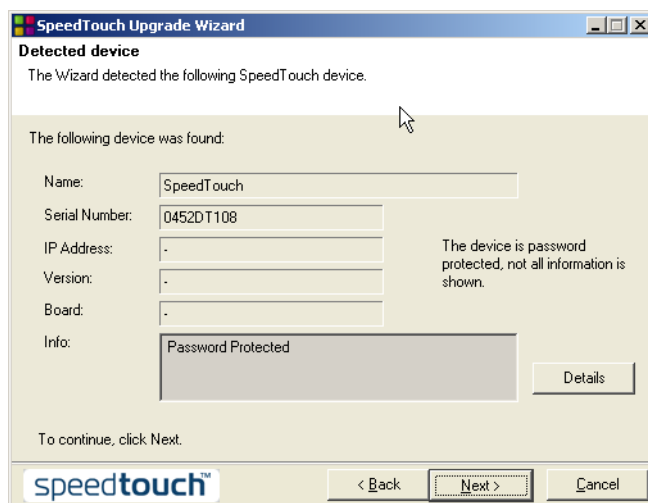


If more than one device is found, a list of available devices will be provided. If this is the case, select your SpeedTouch™ device and click **Next**.



If the wizard does not find any SpeedTouch™ on the network an error window appears, refer to [“6.1.2 Upgrade Troubleshooting”](#) on page 82.

- 5 Enter your SpeedTouch™ security **User name** and **Password**.

- 6 The following window shows the system software version currently active on the SpeedTouch™ as well as one or more system software versions available on the CD:

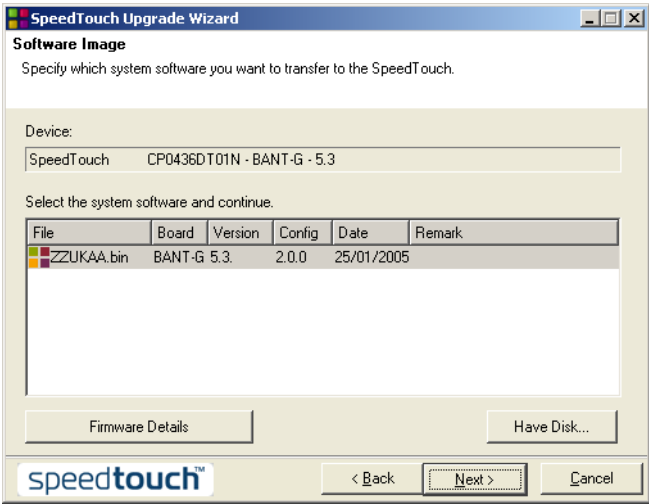

For more information on a found software version, click **Firmware Details**.
Select the appropriate system software version and click **Next**.



If your Service Provider has included a separate disk with dedicated upgrade system software, click **Have Disk** to navigate to the location of the appropriate file.

- 7 The following window will allow you to overview your selection. Click **Next** to continue.
- 8 A progress bar will be displayed.
- 9 Finally, click **Finish** to close the wizard.

System software
downgrade

Via the identical procedure it is also possible - although not recommended - to downgrade the SpeedTouch™ by uploading an older system software than the current running version.

However, be aware that functionality added by previous upgrades may be lost, that system password settings may be lost as well as end-to-end connectivity and other configuration settings.



In case of a system software downgrade, in step 6, you must specifically acknowledge your decision before being able to proceed.

6 Troubleshooting

Introduction

This chapter suggest solutions for problems you may encounter while installing or configuring your SpeedTouch™.

If the suggestions do not resolve the problem, look at the support pages on <http://www.speedtouch.com/support> or contact your service provider.

For Internet connection troubleshooting, refer to the provided Installation and Setup Guide.

6.1 General SpeedTouch™ Troubleshooting

SpeedTouch™ does not
work

If none of the LEDs light up, make sure that:

- ▶ The SpeedTouch™ is plugged into a power socket outlet.
- ▶ You are using the correct power supply for your SpeedTouch™ device, that is - depending on the variant you purchased 9 V DC or 15V AC.
- ▶ The power on the SpeedTouch™ is turned on via the push button on the front panel.

SpeedTouch™
unreachable

In case your SpeedTouch™ is unreachable due to misconfiguration, you might consider a hardware reset to factory defaults as described in “[6.3 Reset to Factory Defaults](#)” on page 85.



However, note that resetting the SpeedTouch™ to its factory settings will revoke all the changes you made to the configuration.

Poor SpeedTouch™
performance

Make sure that the SpeedTouch™ is installed and configured as instructed in the Installation and Setup Guide or as instructed by the Service Provider.

6.1.1 Ethernet Troubleshooting

LAN LED does not light
up

Make sure that:

- ▶ The LAN cable is securely connected to the 10/100Base-T port.
- ▶ You are using the correct cable type for your Ethernet equipment, that is UTP CAT5 with RJ-45 connectors.

6.1.2 Upgrade Troubleshooting

Introduction

While upgrading your SpeedTouch™ via the Upgrade Wizard on the Setup CD, you might encounter one of following problems.

Upgrade via Setup CD

If the Upgrade Wizard in step 4, as described in “[Upgrade procedure](#)” on page 77, does not find any SpeedTouch™ on the network, an error window will appear, stating your SpeedTouch™ has not been found.

In this case check that:

- ▶ The SpeedTouch™ is turned on and fully initialised.
- ▶ Your PC is correctly connected to the SpeedTouch™.
- ▶ Your PC has a valid IP address. To check this in MS Windows:
 - 1** In the Windows task bar, click **Start**.
 - 2** Select **Run...**
 - 3** Type **cmd** in the **Open** field.
 - 4** Click **OK**. A black window will appear with a flashing cursor.
 - 5** Type **ipconfig** and then press Enter.
 - 6** Verify that your computer has a valid IP address, that is any address but 0.0.0.0.
- ▶ No dedicated firewall device or router is placed between your PC and the SpeedTouch™.
- ▶ No personal firewall software is running on your PC.

To repeat the search for your SpeedTouch™, click **Back** or restart the wizard. As soon as the wizard finds your SpeedTouch™, you can continue with the Upgrade Wizard.

6.2 UPnP™ on Windows XP Systems

SpeedTouch™ not
detected by UPnP™ or
IGD Control Client

Check on following:


- ▶ Make sure the UPnP™ and Internet Gateway Device Control Client Networking components are added to your MS Windows XP system.
- ▶ Your computer doesn't support UPnP™ if you run an operating system other than MS Windows XP and MS Windows Millennium.
- ▶ Make sure that UPnP™ is not disabled in the SpeedTouch™ web page; see "4.5.2 Game & Application Sharing" on page 57.

Adding UPnP™


If you are running Microsoft Windows XP, it is recommended to add the UPnP™ component to your system.

Proceed as follows:

- 1 On the **Start** menu, click **(Settings >) Control Panel**.
- 2 The **Control Panel** window appears. Click **Add or Remove Programs**.
- 3 In the **Add or Remove Programs** window appears, click **Add/Remove Windows Components**.
- 4 In the **Windows Components Wizard**, select **Networking Services** in the **Components** list and click **Details**.

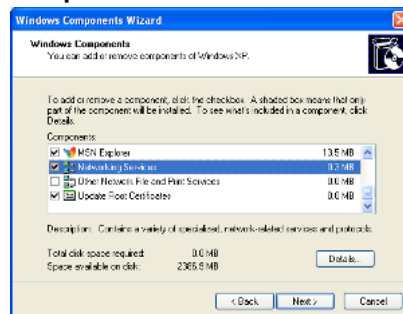

- 5 In the **Networking Services** window, select **Universal Plug and Play** or **UPnP User Interface** and click **OK**.

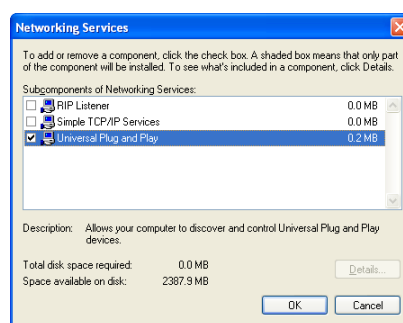


- 6 Click **Next** to start the installation and follow the instructions in the **Windows Components Wizard**.
- 7 At the end of the procedure the wizard prompts you that the installation was successful. Click **Finish** to quit.

Adding IGD Discovery and Control

Your MS Windows XP system is able to discover and control Internet Gateway Devices (IGD), like the SpeedTouch™ on your local network. Therefore it is recommended to add the IGD Discovery and Control client to your system.


Proceed as follows:

- 1** On the Windows task bar, click **Start**.
- 2** Select **(Settings >) Control Panel > Add or Remove Programs**.
- 3** In the **Add or Remove Programs** window, click **Add/Remove Windows Components**.
- 4** The **Windows Components Wizard** appears:

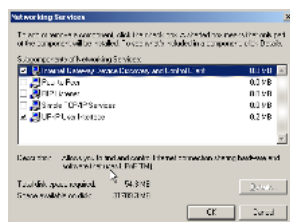

Select **Networking Services** in the **Components** list and click **Details**.

- 5** In the **Networking Services** window, Select **Internet Gateway Device Discovery and Control Client** and click **OK**.

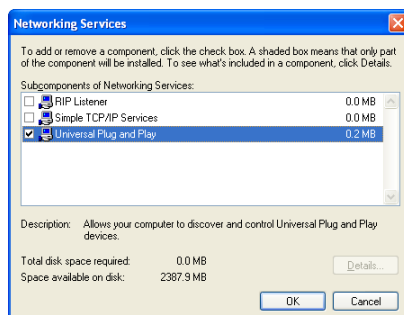

- 6** Click **Next** to start the installation and follow the instructions in the **Windows Components Wizard**.
- 7** At the end of the procedure the wizard prompts you that the installation was successful. Click **Finish** to quit.

6.3 Reset to Factory Defaults

Resetting your SpeedTouch™

You might consider a reset to factory defaults as described below.



Be aware that a reset to factory defaults will revoke all configurational changes you made to the SpeedTouch™.

You can choose between:

- ▶ **Hardware reset**
- ▶ **Software reset**

A reset to factory default settings deletes the configuration profile settings. Therefore, after the reset, a reconfiguration of your SpeedTouch™ will be needed.

Hardware reset


Proceed as follows:

- 1** Make sure the SpeedTouch™ is powered on.
- 2** Power off the SpeedTouch™ by pressing the power button until all LEDs turn off.
- 3** Press the power button once again (shortly).
- 4** As soon as the Power/System LED is flashing green, press the power button once more (shortly).
- 5** The Power/System LED stops flashing to become solid green. After six seconds, it starts flashing green again. Press the power button once more (shortly).
- 6** All LEDs flash green once.
- 7** The SpeedTouch™ reboots and will come online with factory default settings.

Software reset

Proceed as follows:

- 1** Go to the SpeedTouch™ web pages.
- 2** In the menu select **SpeedTouch > Configuration**.
- 3** In the **Pick a task...** list, click **Reset my SpeedTouch to default settings**.
- 4** The SpeedTouch™ restarts.
- 5** The SpeedTouch™ returns to the SpeedTouch™ Home page (unless the IP address of your computer is not in the same subnet as the default IP address of the SpeedTouch™, being 192.168.1.254).

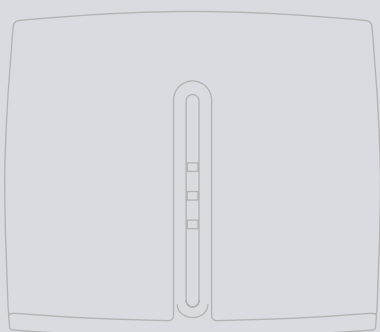

Need more help?

Additional help is available online at www.speedtouch.com